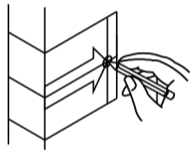


INSTALLATION INSTRUCTIONS DUMMY KNOB (TYPE 75)**1. MARK DOOR**

Start approximately 38" (965mm) from floor. Fold and apply template to high edge of door bevel and mark center hole on door face through guide on template for 2-3/8" (60mm) or 2-3/4" (70mm) backset.

2. INSTALL KNOB