


INSTRUCTIONS FOR INSTALLATION OF PANIC PROOF COMBINATION SET

**FOLD HERE ON
EDGE OF DOOR**

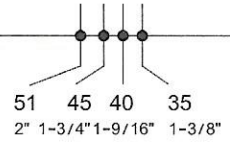

Drill 25.4mm hole at center of door edge.

2-3/4" (70mm) BACKSET

2-3/8" (60mm) BACKSET

∅ 54mm (2-1/8")


∅ 54mm (2-1/8")

CENTER TO CENTER 5-1/2" (139.7mm)

∅ 54mm (2-1/8")

2-3/4" (70mm) BACKSET

2-3/8" (60mm) BACKSET

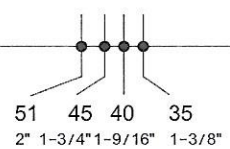

Drill 25.4mm hole at center of door edge.